

Care and Maintenance

General

Inspect all fixing bolts for tightness every six months, including those securing brackets. Tighten if necessary.

Check all moving parts for wear. If excessively worn, the parts should be replaced. Do not use any lubricant.

Track

Keep track free from obstruction and excessive dirt or water. Visible surface should be cleaned using a damp cloth and mild detergent, then wipe dry.

Do not use lubricant, nylon wheeled hangers fitted, which eliminates the need for track greasing.

Running Gear

Keep running gear free from obstruction and excessive dirt or water. Do not lubricate nylon running gear.

Hangers

All hangers are fitted with nylon wheels, requiring no greasing. If doors 'settle' and door clearance is reduced causing friction, raise the door by the hanger adjustment nuts. Step-less height and lateral adjustment.

Track Stops

Track stops must be kept clear, clean and free of obstructions. Continuously adjustable hold closed force.

Floor Guides

Floor guides and floor channel must be kept clear and free of obstructions. Floor guide for glass panel adjustable, free of play.