


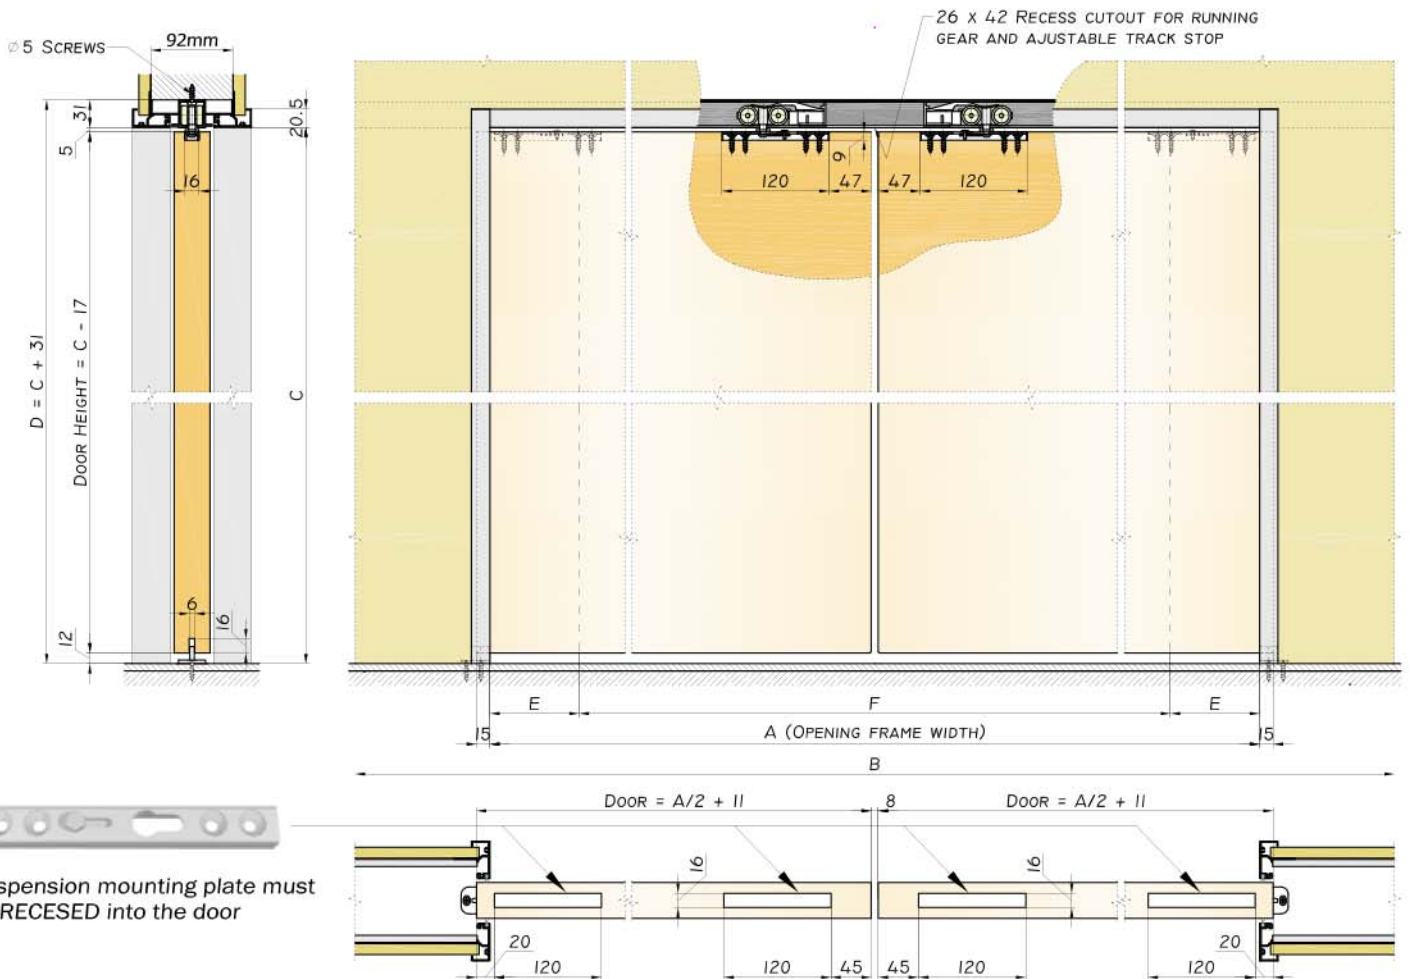

- A - Opening frame width.
- B - Overall frame size.
- C - Distance from finished floor to underside of track.
- D - Distance from finished floor to underside of support beam.
- E - Projection of door from cavity.
- F - Clear opening width.



Suspension mounting plate must be RECESSED into the door